

# Instructions for the **First Pitch** Curveball Machine

---

Your new First Pitch Curveball machine come in three parts:

1. Legs
2. Base
3. Body

- First attach the legs to the base. Then, with the help of someone else, lift the main body of the machine and set it on the base and lock the **lever**<sup>1</sup> down. This is a **ratchet** type lever. To adjust the position of the lever, push with thumb on the screw and pull with fingers to release the ratchet. While the ratchet is released, rotate the lever to reposition.
- The tires are new and can be quite slick. Take some 60 grit sandpaper and scuff the shine off the tire.
- **Please note:** When starting your Curveball pitching machine, always have the dials set low, 20 at the highest and then adjust your speed after the motors start.

## For Adjustable Curveball machine only:

The tires on the Adjustable Curveball machine move closer together for throwing baseballs and farther apart for throwing softballs. Underneath the tires there are silver knobs. Loosen these knobs and slide tires to the proper distance.

**Questions? Call 1-888-400-9498**

