

Instructions for the **First Pitch** Relief Pitcher Machine

- Insert legs and snap **buttons into holes**¹ on the base of the machine.
- You received two ball chutes/rings. The smaller one is for baseballs and the larger is for softballs. Install ball chute for proper size ball using silver **knob**² on top of skid plate. Tighten down knob.
- Adjust skid plate up and down by loosening the two **nuts**³ with power off.
- Adjust angle of pitch by using the silver tension **T-handle**⁴ near the bottom.
- Adjust speed of pitch with the **dial**⁵ on the top of the control box.
- If you are having trouble getting distance or speed with your new machine, check the skid plate's height. If the adjustment is too loose or too tight you will get inconsistent throws. You must get a good firm pinch on the ball.

Questions? Call 1-888-400-9498

www.firstpitch.com

