


Assembly Instructions for Curveball Machine

FIG 1

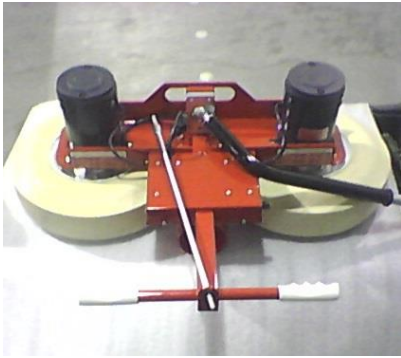

Place machine on flat surface as shown in figure 1. Remove black handle, nut and washer from the tension rod.

On the other end of the rod, remove plastic wrap. Keep the washer in place. Slide the handle end of the rod through the black rubber grommet as shown in figure 1.

FIG 2



Insert other end of rod (with washer in place) into hole under the neck-ball as shown in figure 2.

FIG 3




On handle end, thread on nut first, and then the washer followed by black handle.

With a 9/16" wrench, tighten nut against the handle to secure.

Tighten tension rod into the hole near the neck-ball until tight.

FIG 4

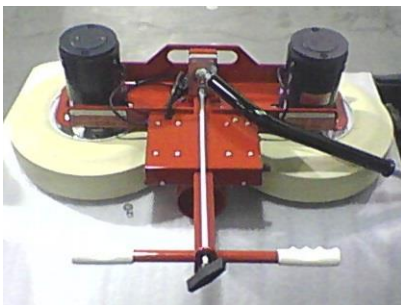

Finished product. You are now ready to place machine into base and legs.